


Coloronix DMX Dip Switch Chart

For installations requiring DMX control, set the personalized DMX address using the address table (Below) for address dip switch position settings. The Dip Switch Board can be found inside the housing accessible below the ceiling. See figure. Note: Up to 128 unique 4-channel addresses can be set per DMX universe.

Dip Switch Inside Housing

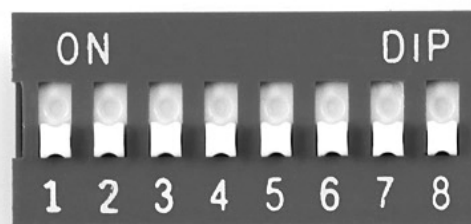

Dip Switch Setting	DMX Channels
1	1-4
1,3	5-8
1,4	9-12
1,3,4	13-16
1,5	17-20
1,3,5	21-24
1,4,5	25-28
1,3,4,5	29-32
1,6	33-36
1,3,6	37-40
1,4,6	41-44
1,3,4,6	45-48
1,5,6	49-52
1,3,5,6	53-56
1,4,5,6	57-60
1,3,4,5,6	61-64
1,7	65-68
1,3,7	69-72
1,4,7	73-76
1,3,4,7	77-80
1,5,7	81-84
1,3,5,7	85-88
1,4,5,7	89-92
1,3,4,5,7	93-96
1,6,7	97-100
1,3,6,7	101-104
1,4,6,7	105-108
1,3,4,6,7	109-112
1,5,6,7	113-116
1,3,5,6,7	117-120
1,4,5,6,7	121-124
1,3,4,5,6,7	125-128
1,8	129-132
1,3,8	133-136

Dip Switch Setting	DMX Channels
1,4,8	137-140
1,3,4,8	141-144
1,5,8	145-148
1,3,5,8	149-152
1,4,5,8	153-156
1,3,4,5,8	157-160
1,6,8	161-164
1,3,6,8	165-168
1,4,6,8	169-172
1,3,4,6,8	173-176
1,5,6,8	177-180
1,3,5,6,8	181-184
1,4,5,6,8	185-188
1,3,4,5,6,8	189-192
1,7,8	193-196
1,3,7,8	197-200
1,4,7,8	201-204
1,3,4,7,8	205-208
1,5,7,8	209-212
1,3,5,7,8	213-216
1,4,5,7,8	217-220
1,3,4,5,7,8	221-224
1,6,7,8	225-228
1,3,6,7,8	229-232
1,4,6,7,8	233-236
1,3,4,6,7,8	237-240
1,5,6,7,8	241-244
1,3,5,6,7,8	245-248
1,4,5,6,7,8	249-252
1,3,4,5,6,7,8	253-256
1,9	257-260
1,3,9	261-264
1,4,9	265-268
1,3,4,9	269-272

Dip Switch Setting	DMX Channels
1,5,9	273-276
1,3,5,9	277-280
1,4,5,9	281-284
1,3,4,5,9	285-288
1,6,9	289-292
1,3,6,9	293-296
1,4,6,9	297-300
1,3,4,6,9	301-304
1,5,6,9	305-308
1,3,5,6,9	309-312
1,4,5,6,9	313-316
1,3,4,5,6,9	317-320
1,7,9	321-324
1,3,7,9	325-328
1,4,7,9	329-332
1,3,4,7,9	333-336
1,5,7,9	337-340
1,3,5,7,9	341-344
1,4,5,7,9	345-348
1,3,4,5,7,9	349-352
1,6,7,9	353-356
1,3,6,7,9	357-360
1,4,6,7,9	361-364
1,3,4,6,7,9	365-368
1,5,6,7,9	369-372
1,3,5,6,7,9	373-376
1,4,5,6,7,9	377-380
1,3,4,5,6,7,9	381-384
1,8,9	385-388

Dip Switch Setting	DMX Channels
1,3,8,9	389-392
1,4,8,9	393-396
1,3,4,8,9	397-400
1,5,8,9	401-404
1,3,5,8,9	405-408
1,4,5,8,9	409-412
1,3,4,5,8,9	413-416
1,6,8,9	417-420
1,3,6,8,9	421-424
1,4,6,8,9	425-428
1,3,4,6,8,9	429-432
1,5,6,8,9	433-436
1,3,5,6,8,9	437-440
1,4,5,6,8,9	441-444
1,3,4,5,6,8,9	445-448
1,7,8,9	449-452
1,3,7,8,9	453-456
1,4,7,8,9	457-460
1,3,4,7,8,9	461-464
1,5,7,8,9	465-468
1,3,5,7,8,9	469-472
1,4,5,7,8,9	473-476
1,3,4,5,7,8,9	477-480
1,6,7,8,9	481-484
1,3,6,7,8,9	485-488
1,4,6,7,8,9	489-492
1,3,4,6,7,8,9	493-496
1,5,6,7,8,9	497-500
1,3,5,6,7,8,9	501-504
1,4,5,6,7,8,9	505-508

ColorRay Stand Alone Mode

For application not using DMX control, user can preprogram shows.

The fixture's on board computer have been pre-configured with ColorRay programs. No additional software or hardware is needed to access. Set the dip switch address for stand alone use (see table below)

Dip Address	Setting	Function	Speed
0	All Down	Demo Mode: Red, Green, Blue, White	n/a
742	2,3,6,7,8,10	Static Color: Warm White	n/a
743	1,2,3,6,7,8,10	Static Color: Cool White	n/a
744	4,6,7,8,10	Static Color: Red	n/a
745	1,4,6,7,8,10	Static Color: Green	n/a
746	2,4,6,7,8,10	Static Color: Light Blue	n/a
747	1,2,4,6,7,8,10	Static Color: Dark Blue	n/a
748	3,4,6,7,8,10	Static Color: Orange	n/a
749	1,3,4,6,7,8,10	Static Color: Purple	n/a
750	2,3,4,6,7,8,10	Static Color: Pink	n/a
751	1,2,3,4,6,7,8,10	Static Color: Yellow	n/a
752	5,6,7,8,10	Full Rainbow: Full Color Fade, Repeat	0.5 seconds
753	1,5,6,7,8,10	Full Rainbow: Full Color Fade, Repeat	5 seconds
754	2,5,6,7,8,10	Full Rainbow: Full Color Fade, Repeat	5 minutes
755	1,2,5,6,7,8,10	Full Rainbow: Full Color Fade, Repeat	30 minutes
756	3,5,6,7,8,10	Christmas Colors: Red, Green, Repeat	0.5 seconds
757	1,3,5,6,7,8,10	Christmas Colors: Red, Green, Repeat	5 seconds
758	2,3,5,6,7,8,10	Christmas Colors: Red, Green, Repeat	5 minutes
759	1,2,3,5,6,7,8,10	Christmas Colors: Red, Green, Repeat	30 minutes
760	4,5,6,7,8,10	Cool Blue: Dark Blue, Sky Blue, Repeat	0.5 seconds
761	1,4,5,6,8,10	Cool Blue: Dark Blue, Sky Blue, Repeat	5 seconds
762	2,4,5,6,7,8,10	Cool Blue: Dark Blue, Sky Blue, Repeat	5 minutes
763	1,2,4,5,6,7,8,10	Cool Blue: Dark Blue, Sky Blue, Repeat	30 minutes
764	3,4,5,6,7,8,10	Exotic Colors: Orange, Turquoise, Neon Green, Fuchsia, Repeat	0.5 seconds
765	1,3,4,5,6,7,8,10	Exotic Colors: Orange, Turquoise, Neon Green, Fuchsia, Repeat	5 seconds
766	2,3,4,5,6,7,8,10	Exotic Colors: Orange, Turquoise, Neon Green, Fuchsia, Repeat	5 minutes
767	1,2,3,4,5,6,7,8,10	Exotic Colors: Orange, Turquoise, Neon Green, Fuchsia, Repeat	30 minutes

ColorRay Remote Control

For remote control of the ColorRay setting, use SCC5-In-Wall Receiver and remote control. All programs and static colors can be set via remote control.

Note: Set dip switch 1-8 off and dip switch 9, 10 on for Color Ray stand alone mode