




SCC4: COLOR WHEEL Quick Start Guide V.1.0

Coloronix, Inc.
5461 West Jefferson Boulevard
Los Angeles, California 90016
(323) 677-4242
<http://www.rgbw.com>


How to Connect, Configure, Mount, and Operate your Color Wheel:

1. Connecting your Color Wheel

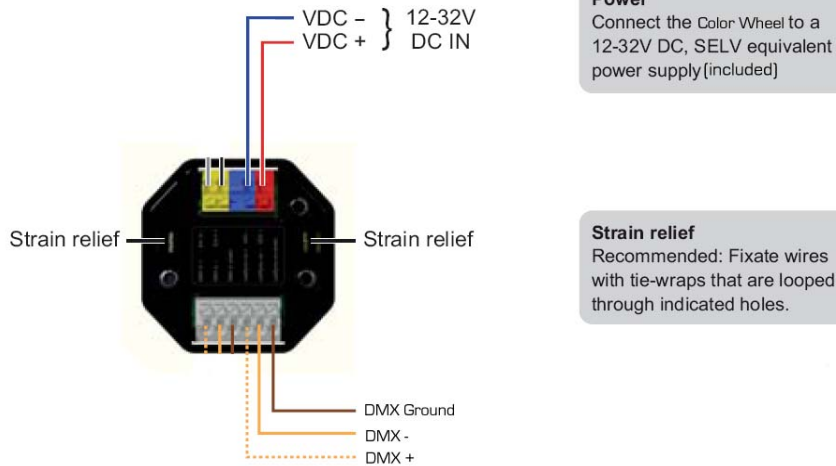

2. Configuring Your Color Wheel

Configure your Color Wheel by setting the dip switches on the front:

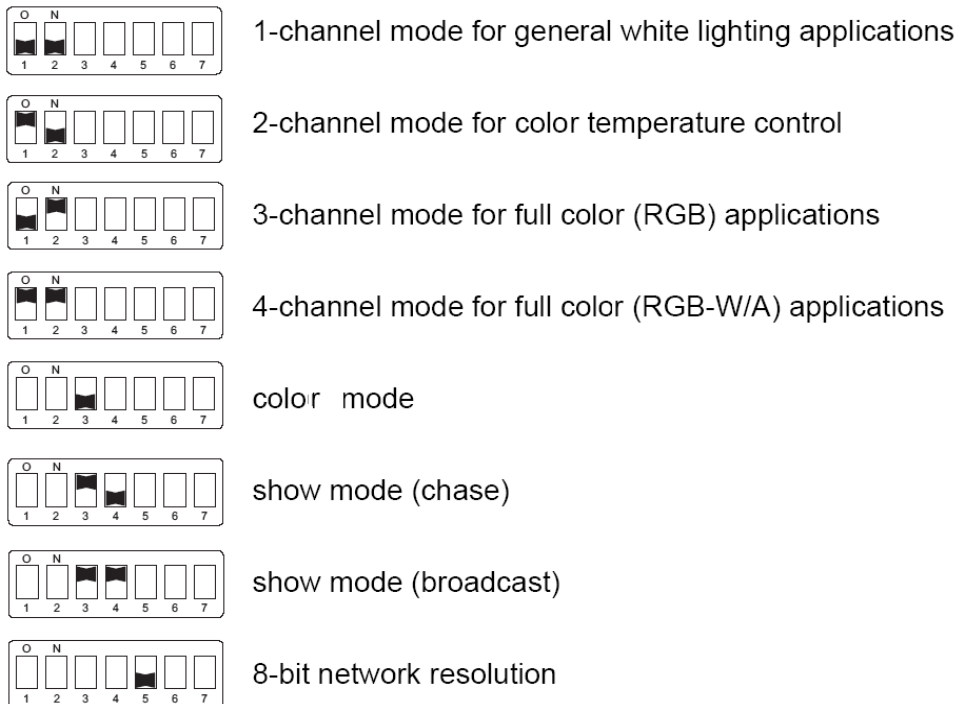

Dip Switch 6 and 7 are non-influential

3. Mounting Your Color Wheel



The dip switches remain accessible after installation. When carrying out changes in the dip switch settings, turn the Color Wheel off and on again (by pressing the knob twice) to activate the new settings.

Faceplate, wallbox, and screws are not included with your Color Wheel.

4. Operating your Color Wheel

a. Operating your Color Wheel

Turn the light on



Change brightness



Turn the light off



Advanced operation for 4-channel (RGBW) color mode


Turn the light on



Activate configuration mode



Set color

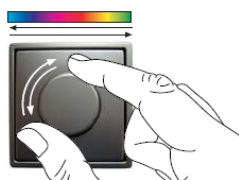

Save color setting



Set saturation



Save setting and return to basic operation



Advanced operation for 4-channel (RGBW) show mode

Turn the light on



Activate configuration mode



Set show speed



Save setting and return to basic operation

